

KNOW YOUR TEE PAL II



BEFORE YOU START

PRACTICE ON A TEE BOX

A few practice reps make a big difference.

- **Use real tee-box conditions.**
Yard soil, taller grass, or different ground can interfere with learning Tee Pal.
- **Keep it vertical.**
Push the tee straight down, perpendicular to the ground.
- **Keep squeezing.**
Maintain firm handle pressure until the tee is fully set.
- **Release slowly.**
Open the handles slowly, lower Tee Pal slightly, then move away.
- **Keep the tee slot clean.**
Remove dirt and grass for the smoothest tee placement.

GROUNDSTART™

On firm ground, make a straight starter hole with the pin and guide the tee into the same hole.

PRO: TeeSure™ is factory preset.
No adjustment is required before first use.

NEED HELP?

teepallc.com/support | support@teepallc.com
Warranty details are on the included Warranty & Support Card.



LET YOUR TEE PAL DO THE BENDING

PRO II

QUICK START GUIDE



**LESS BENDING.
MORE GOLF.**

WITH TEESURE™ HEIGHT CONTROL

Tee up and retrieve your tee while standing.

TEEPALLC.COM

QUICK START

LOAD | SQUEEZE | TEE | RELEASE

1 LOAD



Hold Tee Pal horizontally with the opening up. Drop in the ball, then slide the tee into the tee slot.

2 SQUEEZE



Move your dominant hand to the handles: thumb on top, index and middle fingers below. Squeeze firmly.

PRO: ENGAGE TEESURE™

Press either TeeSure probe inward until you hear a CLICK

TEE + RELEASE

3 TEE



Rotate Tee Pal upright. Keep squeezing and push the tee straight down into the ground.

4 RELEASE



KEEP THE BALL + TEE VERTICAL

Moving away too quickly or at an angle can knock the ball off the tee.

FINISH + RETRIEVE

5 STAND



Fully squeeze the handles to extend the Self-Standing Pin. Press the pin into the turf so Tee Pal waits upright.

6 RETRIEVE



TEE IN GROUND

Use tee holder



TEE ON GROUND

Use TeeGrip™

TEEGRIP™: ALIGN > PRESS DOWN > LIFT

Align TeeGrip with the tee shaft and press straight down while holding the lower handle. Lift to retrieve.

GROUNDSTART™

On firm ground, make a straight starter hole with the pin and guide the tee into the same hole.